

**Seats, Heated Rear , (4A4),(Q1A)**


From January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




# Left Rear Heated Seat Temperature Sensor, Left Rear Bench Seat Heating Element

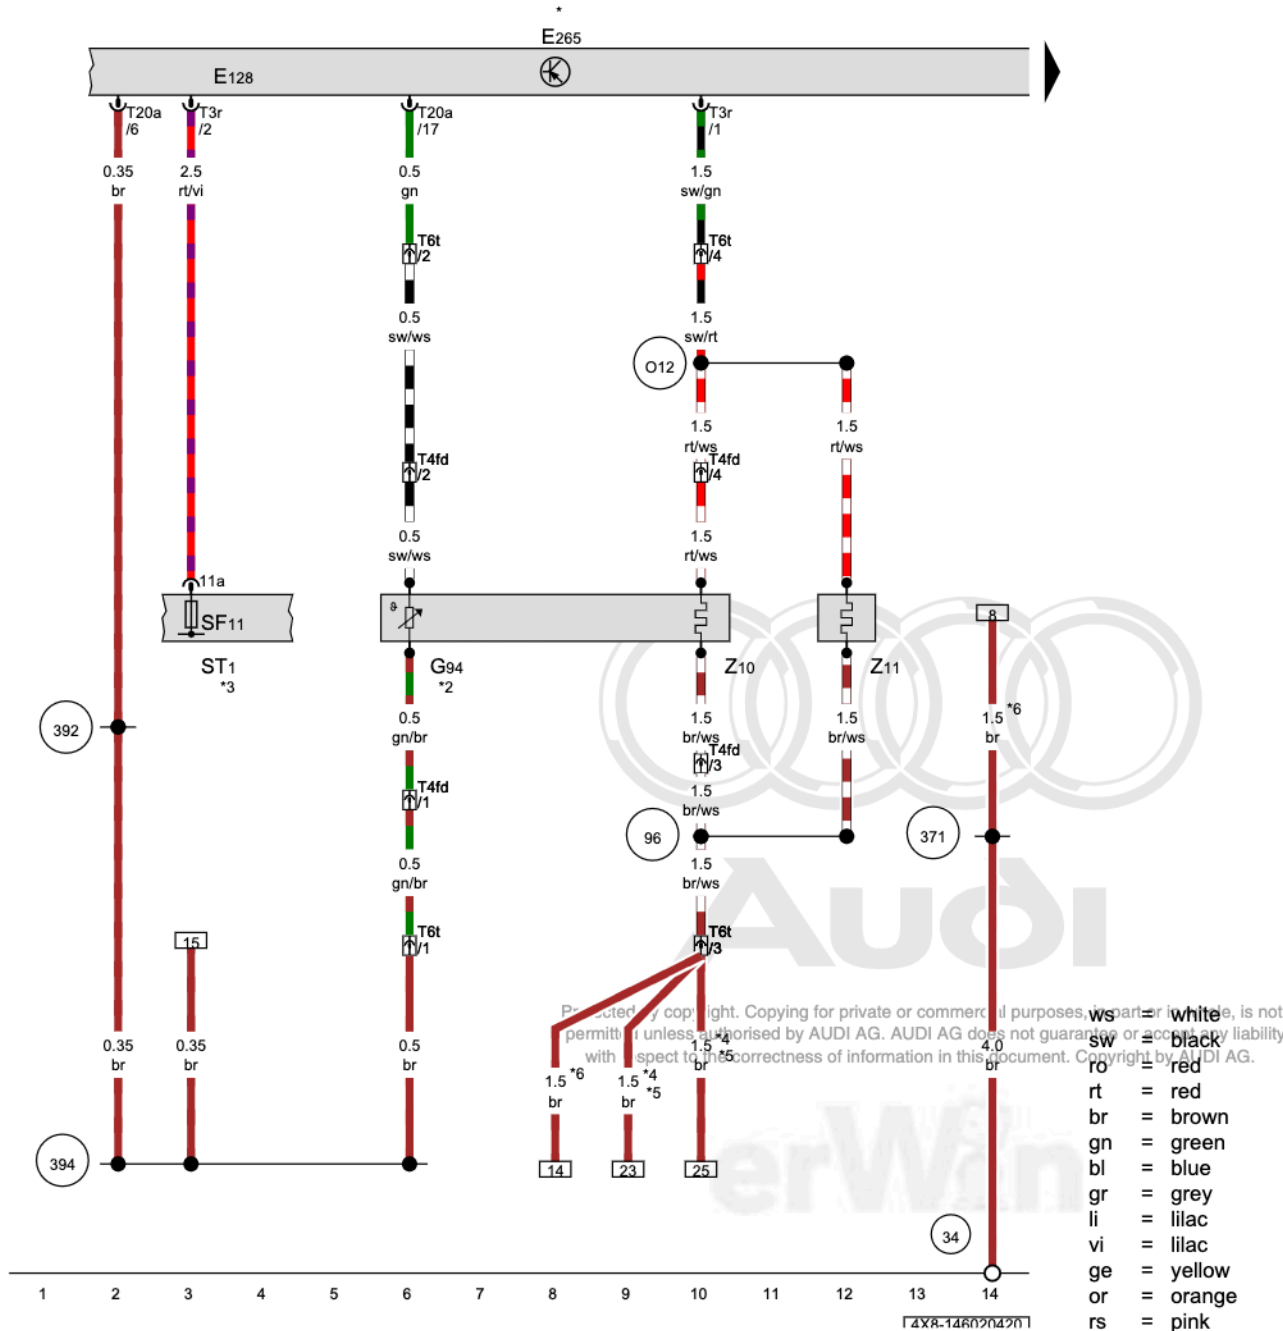

- E128 Left Rear Heated Seat Regulating Switch
- E265 Rear A/C Display Control Head
- G94 Left Rear Heated Seat Temperature Sensor
- ST1 Fuse Panel 1
- SF11 Fuse 11 (On Fuse Panel F)
- T3r 3-Pin Connector
- T4fd 4-Pin Connector, Black
- T6t 6-Pin Connector, In the Coupling Point for the Left Rear Seat, Green
- T20a 20-Pin Connector
- Z10 Left Rear Bench Seat Heating Element
- Z11 Left Rear Backrest Heating Element

- 34 Ground Connection Under Driver Seat
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- 392 Ground Connection 27 (in Main Wiring Harness)
- 394 Ground Connection 29 (in Main Wiring Harness)
- O12 Connection 1 (in Heated Seats Wiring Harness)

- \* Climate Control, Comfort Climatronic
- \*2 For Vehicles Without Adjustable Seats
- \*3 Refer to Applicable Wiring Diagram for Fuse Positions
- \*4 Depending on Equipment
- \*5 Through May 2014
- \*6 From June 2014

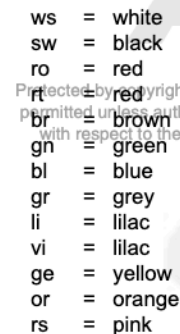

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

E129	Right Rear Heated Seat Regulating Switch
E265	Rear A/C Display Control Head
G95	Right Rear Heated Seat Temperature Sensor
T3r	3-Pin Connector
T4fe	4-Pin Connector, Black
T6u	6-Pin Connector, In the Coupling Point for the Right Rear Seat
T20a	20-Pin Connector
Z12	Right Rear Bench Seat Heating Element
Z13	Right Rear Backrest Heating Element

- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 375 Ground Connection 10 (in Main Wiring Harness)
- 377 Ground Connection 12 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- O13 Connection 2 (in Heated Seats Wiring Harness)
- \* For Vehicles Without Adjustable Seats
- \*2 Depending on Equipment
- \*3 Through May 2014